



SERIES CETUS 800WIDTH

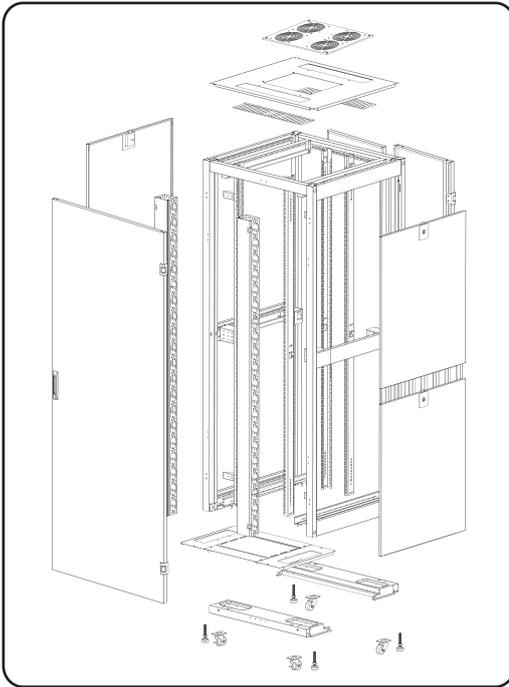


Safety warning - Do not climb on, rock, shake your rack. Only someone with good mechanical skill and who has experience should install this rack. Never exceed the maximum load capacity. If you didn't understand this instructions manual please contact us by info@barpa.eu

Required for installation		
Screwdriver	Adjustable wrench	Tape measure


SUPPLIED PARTS AND HARDWARE									
8x M12X40 bolt A	4x M12 Adjustable feet B	1x Allen key C	CABINETS INSTALLATION MANUAL D	40x M6 E	40x M6x12 E	2x One single door A double door F	2x Two single door F	4x Chain stopper F	
12x M6X15 bolt G	8x M6X12 bolt H	60x M5X10 bolt M	6x The key J	8x Plastic decorative cover L					giveaways K

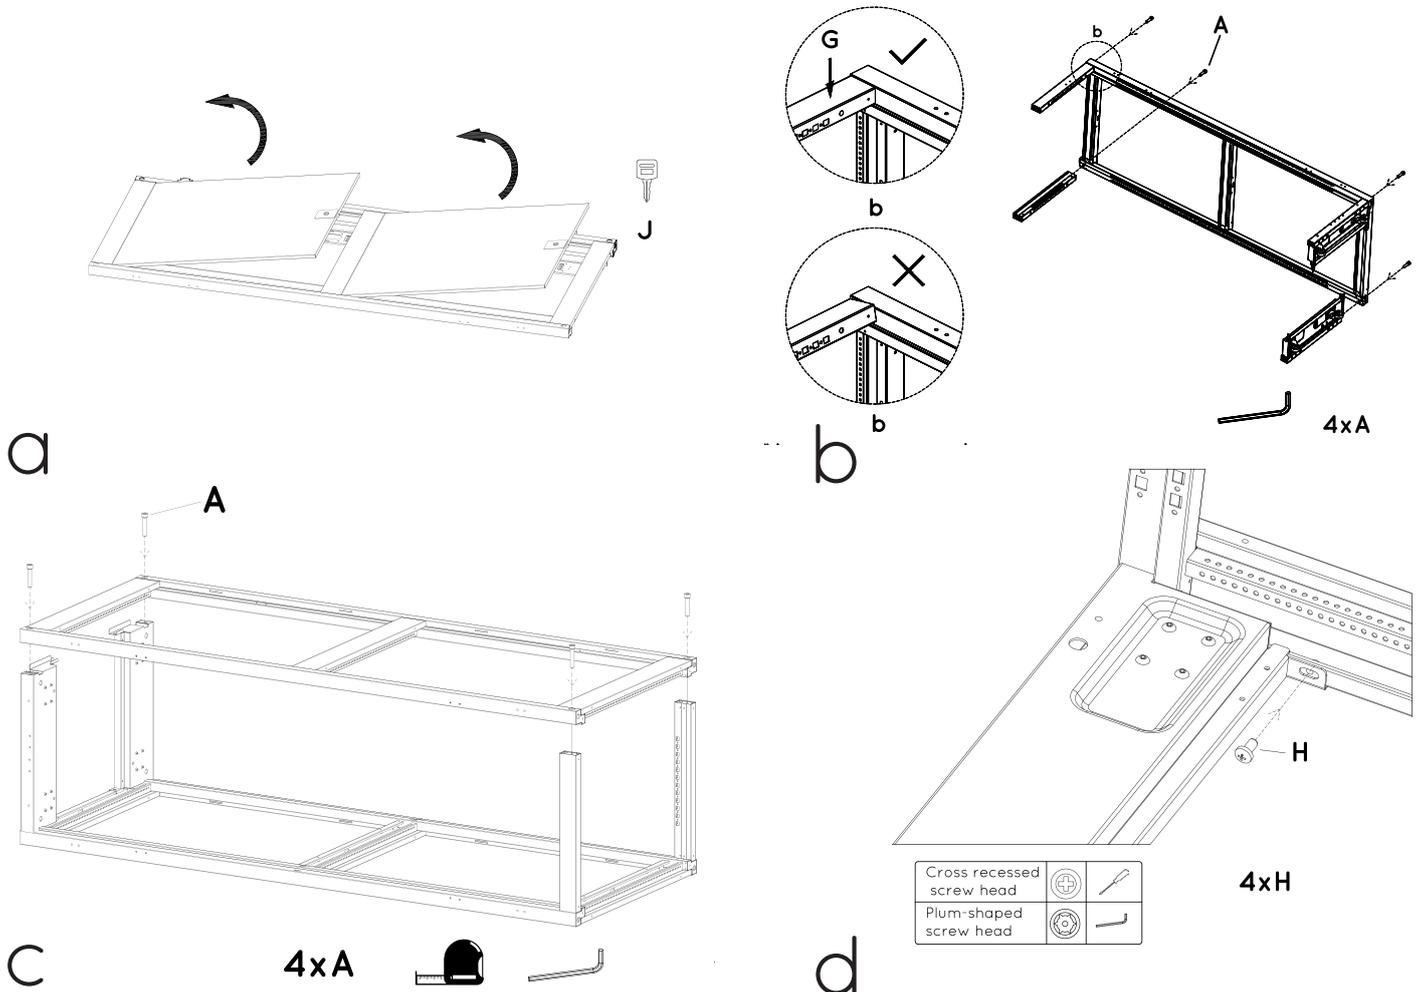


After assembling, if the diagonal framework is more than 4mm, it is required to loosen the bolts and then reassembled;

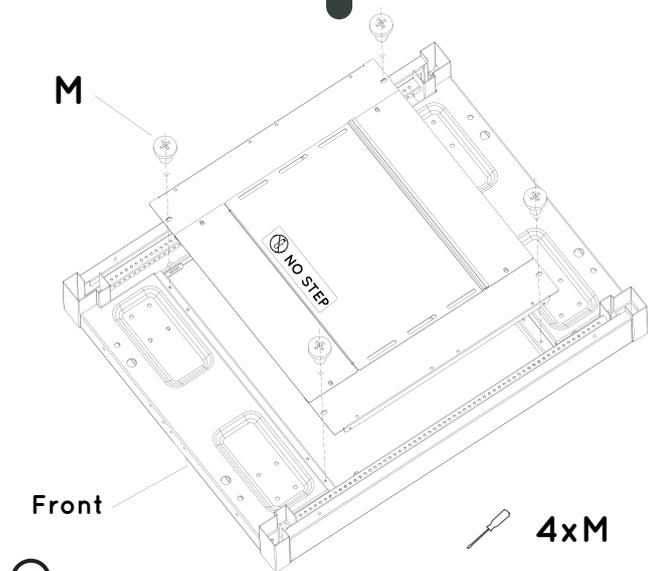


e When assembled the "No Step" sticker is at the front of the cabinet.

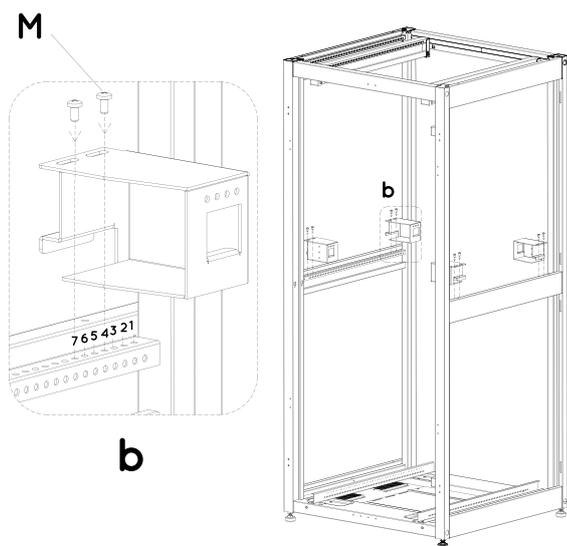


f Change words - Fix in positions 4 & 7 **8xM** 

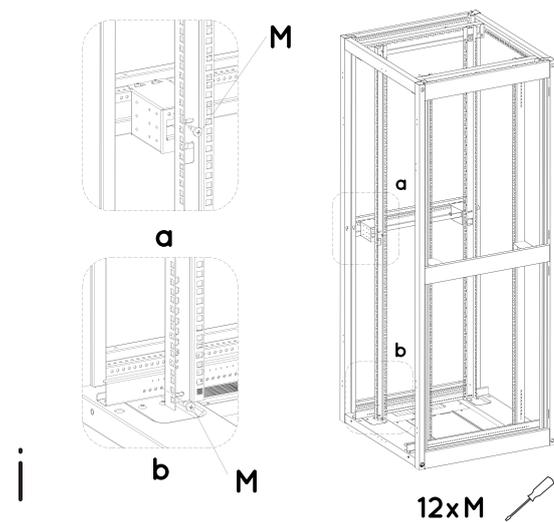



g **12xM** 

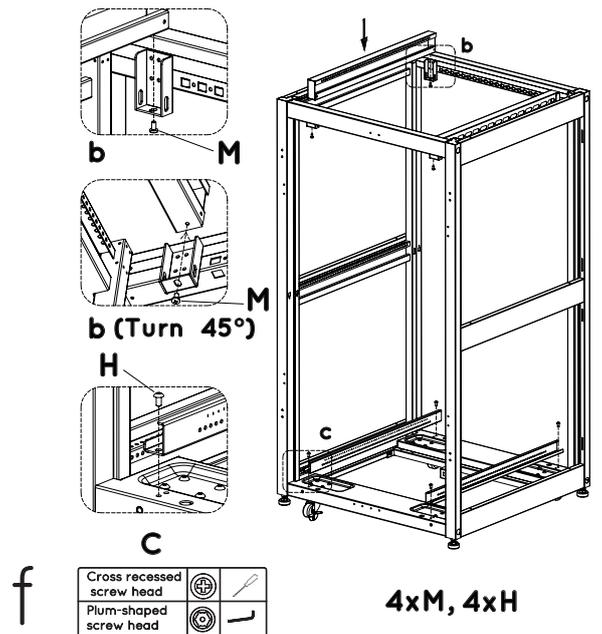

h When assemble the whole frame, the plastic cover(L) should be removed. **8xL**

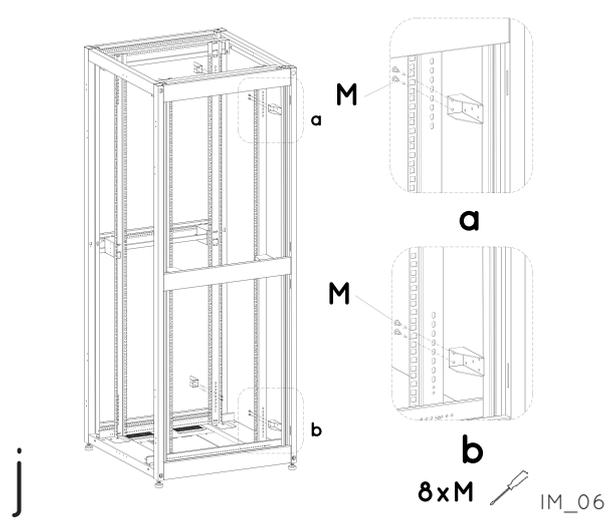


i **8xM**  IM_06

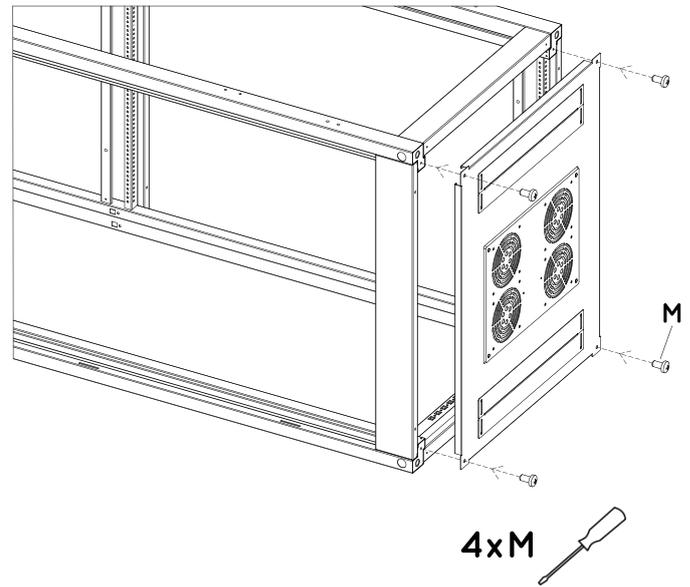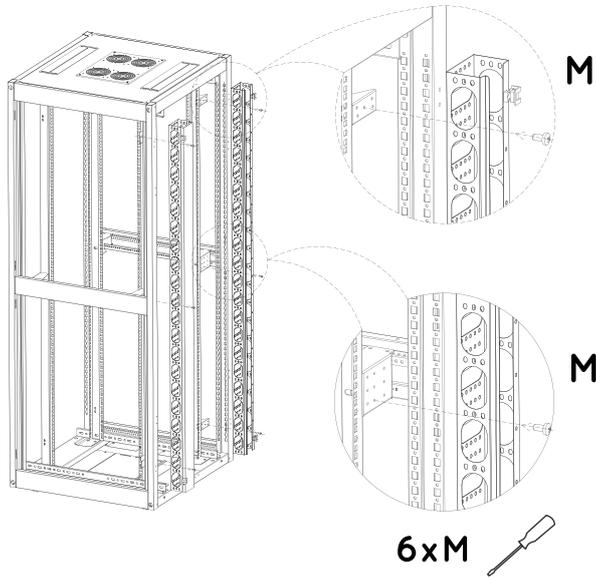

L

M

For the cabinet over 800 depth, the fans should be assembled closed to the rear door;

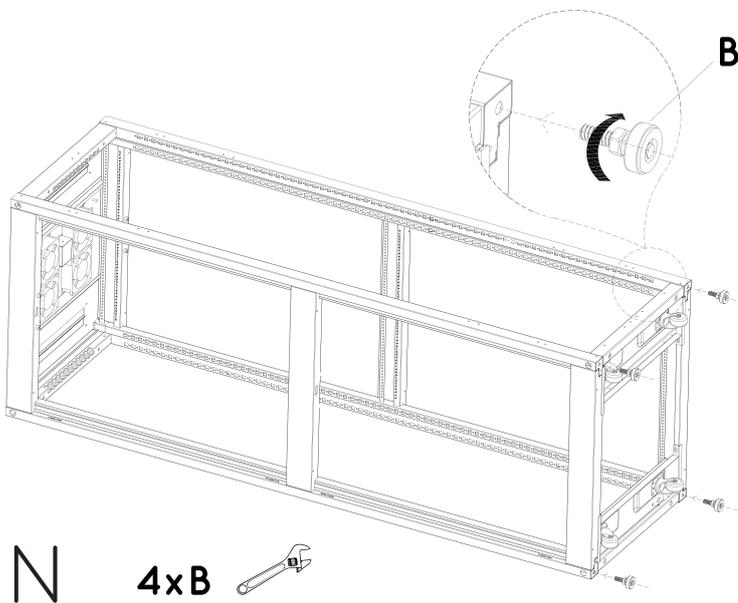


N

4xB

After assembling, the M12 feet should be under (shorter than) the castors in case of breaking when set up the cabinet!

O

When assembling the side panels, it is necessary to lock the panels and remove the keys in case of falling down!

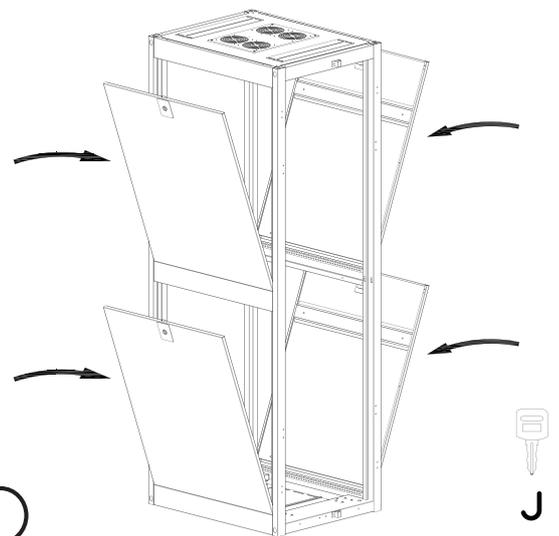









J

barpa

Single or double doors can be fitted front and rear - (Normally single door at the Front and double doors at the rear).

Fitting Single Door
2 Hinges for 42U and smaller
3 Hinges for 47U and taller

Fitting Double Door
2 Hinges for 42U and smaller
3 Hinges for 47U and taller

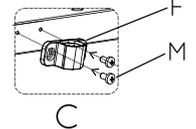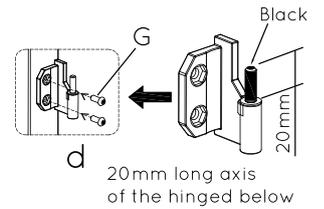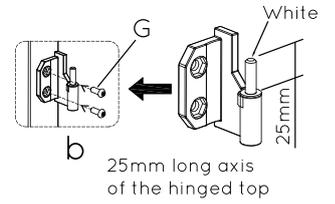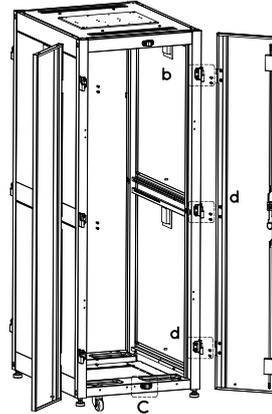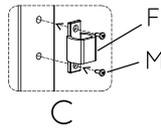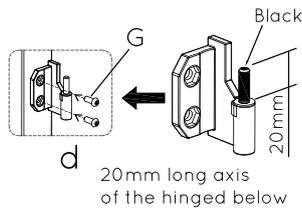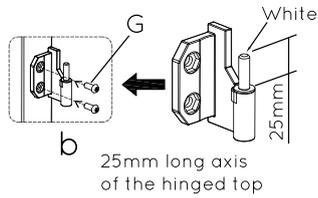
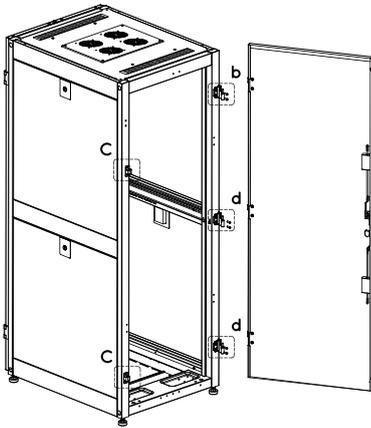


4xG, 2xF, 4xM

8xG, 2xF, 4xM



p

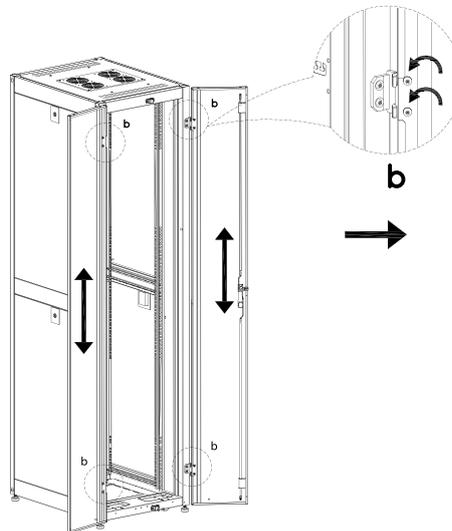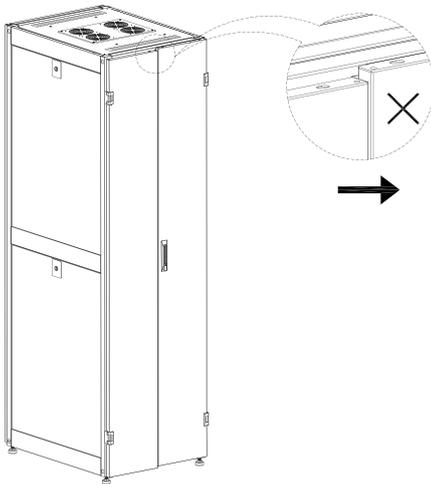

q

Doors can be adjusted by loosening hinge screws, moving the door and retighten.

You are ready to go!

Cautions: To avoid any damage please ensure that is adequate space between each unit for good airflow. Take care to not exceed the 40°C - 104°F temperature.

for more informations please go to www.barpa.eu

IM_06